


ENFO IV Display (PN 108661) Quick Manual



ENFO IV Display (PN 108661) Quick Manual

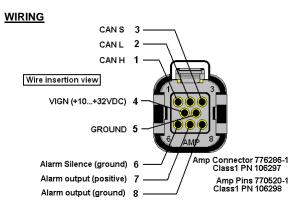


OPERATION


The ENFO IV will display Engine RPM, Engine Oil Pressure, and Engine Coolant Temperature when the associated CAN message is received or the corresponding display will show dashes if its messages are not being received. Voltage will always be displayed. The external alarm will activate when Oil pressure is 10 PSI or less, Engine temperature is 250° F or higher, or voltage is 11.9V or less on a 12V system (23.8V or less with 24V system – the ENFO IV uses automatic voltage detection to determine the low voltage point). During a low voltage or low oil pressure condition the corresponding

display will alternate between the current value and "LO".

During a high temperature condition the Engine Temp display will alternate between the temperature and "HI".

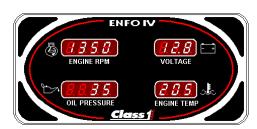


EXTERNAL ALARM and SILENCE SWITCH

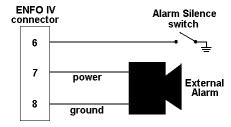

The ENFO IV can supply a maximum of 250 mA to an external alarm. The silence switch will silence the alarm for 5 minutes.

For a detailed operation manual visit www.Class1.com

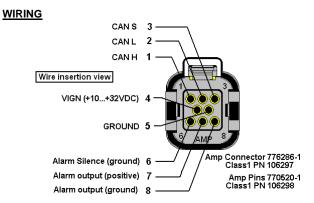

OPERATION

The ENFO IV will display Engine RPM, Engine Oil Pressure, and Engine Coolant Temperature when the associated CAN message is received or the corresponding display will show dashes if its messages are not being received. Voltage will always be displayed.


The external alarm will activate when Oil pressure is 10 PSI or less, Engine temperature is 250° F or higher, or voltage is 11.9V or less on a 12V system (23.8V or less with 24V system – the ENFO IV uses automatic voltage detection to determine the low voltage point).

During a low voltage or low oil pressure condition the corresponding display will alternate between the current value and "LO".

During a high temperature condition the Engine Temp display will alternate between the temperature and " $\mathbf{H}\mathbf{I}$ ".



EXTERNAL ALARM and SILENCE SWITCH

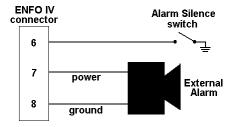

The ENFO IV can supply a maximum of 250 mA to an external alarm. The silence switch will silence the alarm for 5 minutes.

For a detailed operation manual visit www.Class1.com

Manual PN 109135 Rev090303 Manual PN 10935 Rev090303